

## TOILET SAVER INSTALL FOR OVERFLOW SYSTEMS

- 1.**  
Remove reservoir top cover.



- 2.**  
Remove top hanger from overflow tube.




- 3.**  
Hang Toilet Water Saver inside overflow tube.



- 4.**  
Install top hanger back on the overflow tube.



- 5.**  
Adjust Toilet Water Saver ends so they get hooked against overflow tube. The position of Toilet Water Saver is going to be more solid.

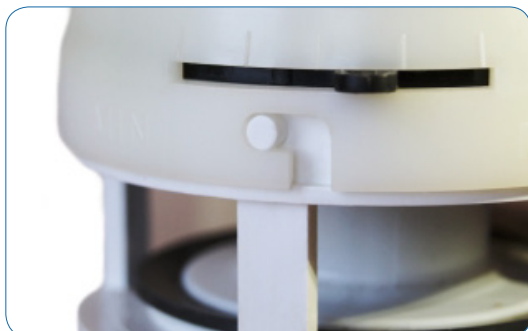

If your overflow tube is equipped with a flow control mechanism, you can use it to adjust Toilet Water Saver flow rate.

