


INSTALLING FAUCET AERATOR


WATERSAVERS® faucet aerator saves water and energy to heat it up. It replaces existing aerator or perlator. The installation is very simple:

1. Unscrew your current aerator by turning it counter-clockwise. If the existing aerator is corroded and can't be loosened by hand, use wrench or pliers. Make sure the rubber seal was also removed, our aerators come with a new quality one.

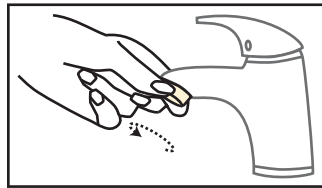


Picture 1

2. By using wet cloth, clean faucet arm and thread. Carefully turn the faucet on for a few seconds to let water carry away sediments inside the faucet arm.

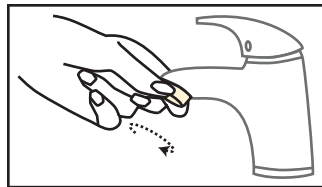

Picture 2

3. Twist the WATERSAVERS® aerator clockwise into place. Make sure to screw it in straight and tight to avoid water leaks. If the aerator can't be fastened enough by hand, use a wrench or pliers, but make sure to protect new aerator and faucet with tape or a rag so it doesn't get scratched.

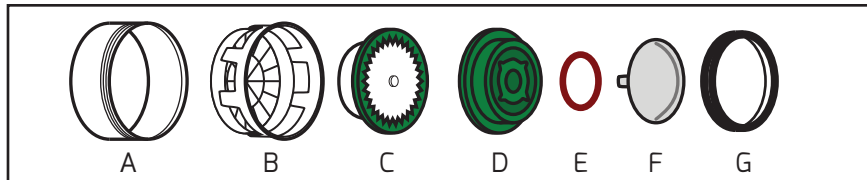


Picture 3: Disassembled aerator. A - Metal case; B - Plastic case;
 C - Plastic regulator part 1; D - Plastic regulator part 2;
 E - Silicone O-ring; F - Sieve; G - Rubber seal



ADJUSTING AERATOR MAXIMUM FLOW


Maximum water flow is regulated by included silicone O-rings. Each O-ring limits different volume of water to pass thru. Desired water flow can be achieved by replacing silicone O-rings:

1. Remove rubber seal (Picture 3: G) and push plastic body out of the metal case A (See Picture 4).

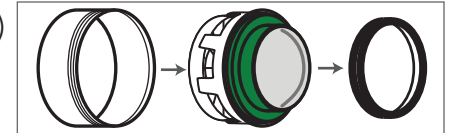


Picture 4

2. Remove white sieve and clean it from caught particles and sediments (Picture 5).

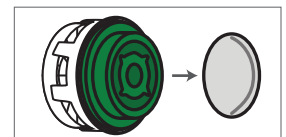

Picture 5


3. Using narrow flat screwdriver or scissors, push out green regulator C-D from plastic case B (Picture 6).

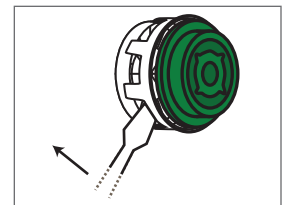

Picture 6


4. Disassembly green regulator to parts C and D (see Picture 7).

5. Using a narrow tool like paper clip or pin, remove the installed O-ring from regulator D by pushing the silicone O-ring out (Picture 8).

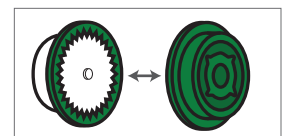


Picture 7

6. Based on the table below, insert desired O-ring or combination of O-rings into regulator D (see Picture 9).

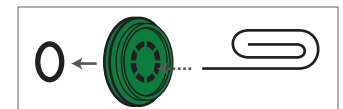

Picture 8

7. Assembly the aerator back together reversing steps **1.** to **4.**

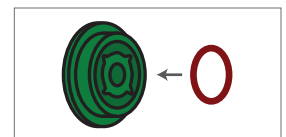

Picture 9

USING O-RINGS TO GET DESIRED MAXIMUM WATER FLOW RATE

1 gal/min . . .	2x thick black O-ring
1.5 gal/min . .	1x thick black O-ring
2 gal/min . . .	1x red O-ring
2.5 gal/min . .	2x thin black O-ring
3 gal/min . . .	1x thin black O-ring
3.5 gal/min . .	remove all O-rings

